

# CROSSROADS

## RV Care & Maintenance Schedule & Checklist

Item	Each Trip	Each Month	3 Months	6 Months	Each Year	As Required	Procedures
Fiberglass exterior		X		X			<ul style="list-style-type: none"> <li>Wash with warm water and mild detergent</li> <li>Wax with liquid or paste wax</li> </ul>
Rood and roof components				X	X		<ul style="list-style-type: none"> <li>Inspect and re-seal as needed</li> <li>Lubricate roof vent mechanism w/light oil &amp; clean completely</li> </ul>
Windows and doors		X	X X		X X		<ul style="list-style-type: none"> <li>Check vinyl seals when washing exterior</li> <li>Check seals for damage and repair as needed</li> <li>Lubricate door hinges &amp; step components with WD40</li> <li>Adjust &amp; lubricate window latches w/powdered graphite or light oil</li> <li>Lube door locks &amp; strike pocket, incl. exterior storage &amp; access doors</li> </ul>
Seals and adhesives		X					<ul style="list-style-type: none"> <li>Inspect and reseal as necessary</li> </ul>
LP gas system					X	X	<ul style="list-style-type: none"> <li>Check for leaks and road damage</li> <li>Have qualified serviceman check pressure &amp; complete system</li> </ul>
Water and drainage	X	X			X	X	<ul style="list-style-type: none"> <li>Check hoses, fittings and connections fro leaks and signs of wear</li> <li>Check drainage system for leaks and road damage</li> <li>Sanitize system</li> <li>Winterize system depending on local seasonal conditions</li> </ul>
Electrical system		X				X X	<ul style="list-style-type: none"> <li>Check GFCI circuits</li> <li>Perform maintenance on generator as outlined in generator manual</li> <li>Check and service batteries</li> </ul>
Appliances	X	X			X		<ul style="list-style-type: none"> <li>Remove food and ice from refrigerator after each trip</li> <li>Clean fan blades ad wash filter on range exhaust hood</li> <li>Check for obstructions and dirt on exterior appliance vents</li> </ul>
Safety equipment	X	X			X		<ul style="list-style-type: none"> <li>Clean smoke detector components</li> <li>Test smoke detector operation</li> <li>Check fire extinguisher pressure and condition</li> </ul>
Carpeting	X					X	<ul style="list-style-type: none"> <li>Vacuum after each trip</li> <li>Clean</li> </ul>
Wood surfaces		X					<ul style="list-style-type: none"> <li>Clean pre-finished panels and wood</li> </ul>
Weight and distribution	X						<ul style="list-style-type: none"> <li>Be sure unit is within specified load limits &amp; weight distribution</li> </ul>
Axles (towable)				X			<ul style="list-style-type: none"> <li>Mounting bolts should be torqued to 145-155 foot pounds</li> </ul>
Wheel bearings (towable)					X	X	<ul style="list-style-type: none"> <li>Repack wheel bearings yearly</li> </ul>
Brakes (towable)				X		X	<ul style="list-style-type: none"> <li>Check operation and (or uneven wear)</li> </ul>

*This is a general guideline only. Read your owner's manual for detailed information and contact your dealer for specific requirements in your geographic area.*